




Historic, archived document

Do not assume content reflects current scientific knowledge, policies, or practices.



Repair Your **ELECTRIC CORDS**

... SPLICING

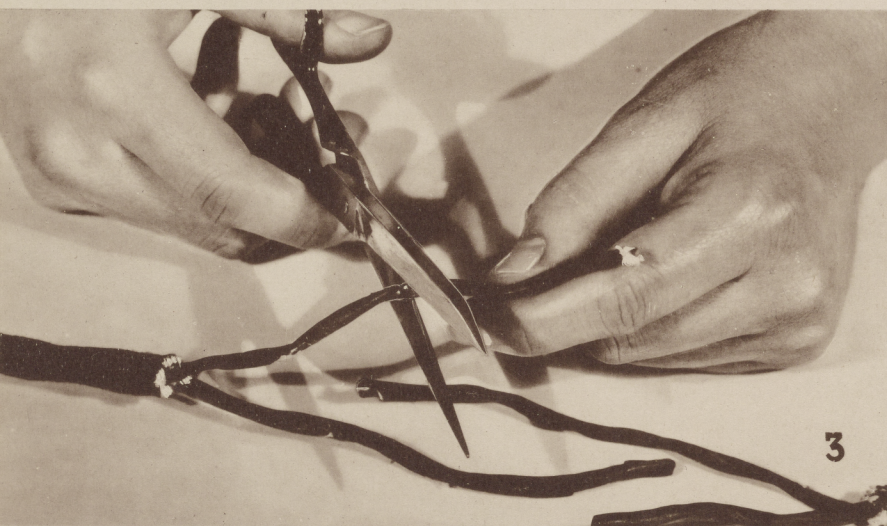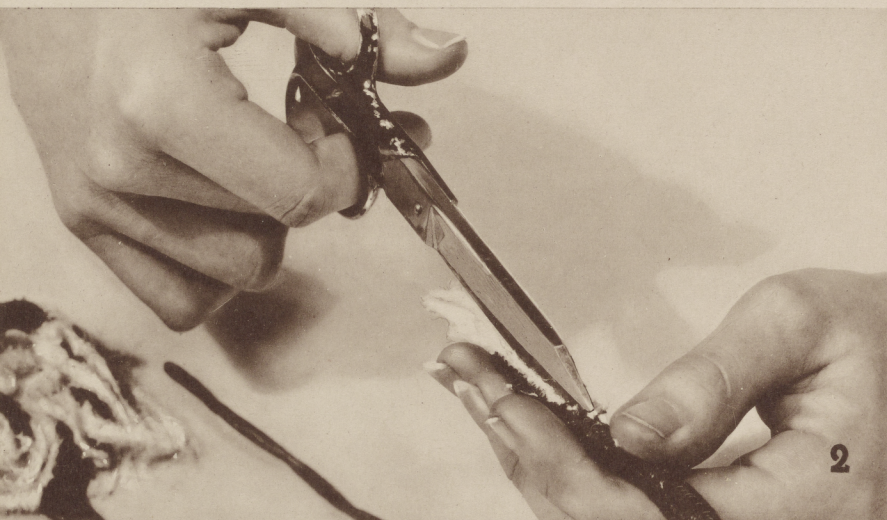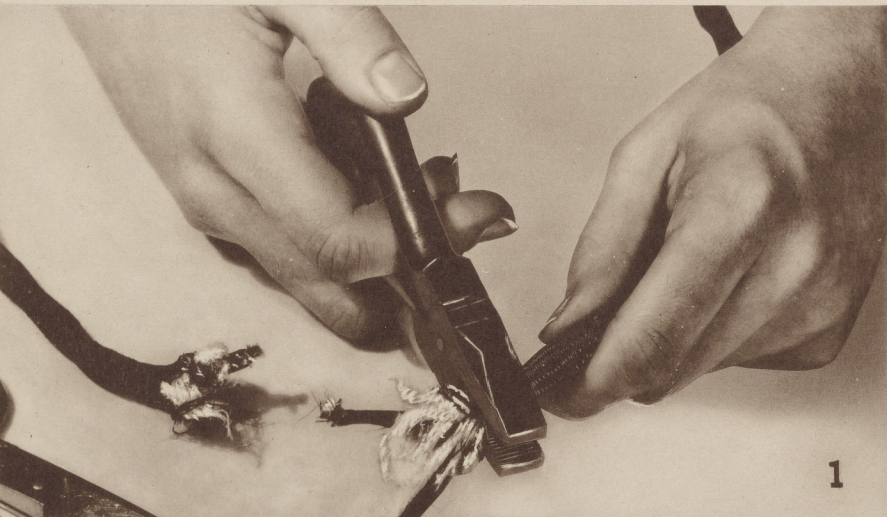

- ① Cut off damaged end of each piece .
- ② Slit and cut off about 5 inches of outer covering from each end.... then unwind and remove fibre or asbestos insulation .
- ③ Cut off about 1 1/2 inches from end of one of the wires on each cord so joinings won't come opposite each other .
- ④ Slit and take off about 2 inches of rubber covering and fine cotton threads from end of each wire .
- ⑤ Brighten wires by gently scraping then twist tightly .

